

## PRT-R Instructions

- ? Programmable Room Thermostat
- ? Blue backlight
- ? Infrared Remote Control (Optional)



### SPECIFICATIONS

Set-point range: 5°C to 70°C

Operating difference: ? 1°C

Switch current rating: ? 16A

Sensing element : Remote NTC



Display: LCD

Power supply: 230V  $\pm$  10% 50-60 Hz


Dimensions: 86 × 86 × 13 mm

Housing: ABS Flame Retardant


### MOUNTING

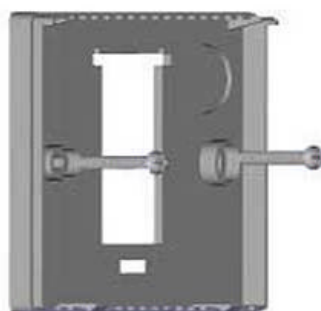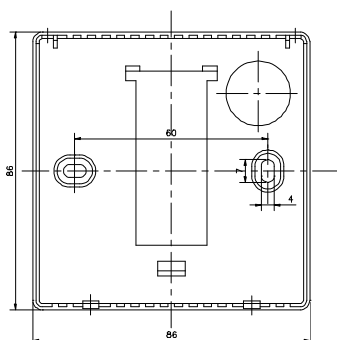


### BUTTON DESCRIPTION

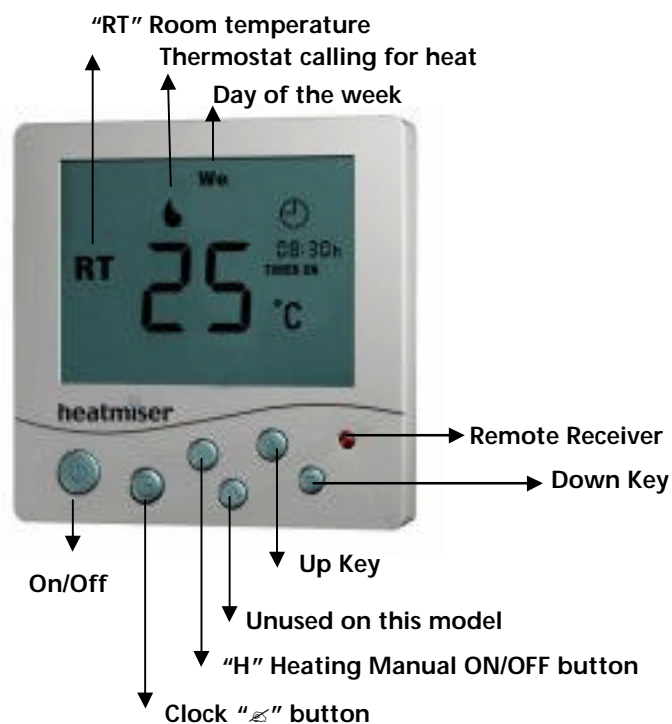


### WIRING DIAGRAMS

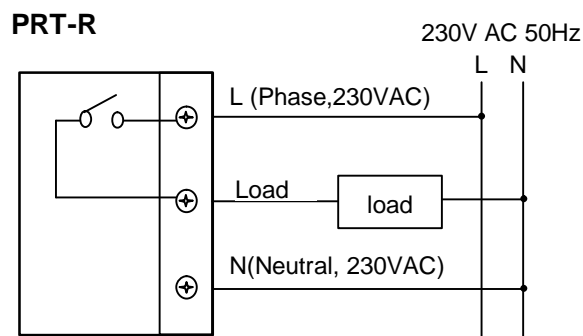

## POWER ON/OFF


- ? To turn the PRT-R on or off press “”


## SETTING THE FROST PROTECTION TEMPERATURE

- ? With the thermostat powered off, press  and “A” for three seconds. You are now prompted to enter the required frost temperature setting. This is set to 12°C as a factory default. (Min = 07°C, Max = 17°C)



## FROST MODE (THERMOSTAT OFF)

To enable this operation;

- ? With the PRT-R turned off.  
Press “” for 3 seconds.  
Select 01 (00=disabled)

When enabled, the PRT-N will maintain the Frost Protection temperature whenever the power has been turned off by use of the “” button.

## TEMPERATURE CALIBRATING:

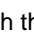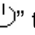
- ? With the PRT-R turned off, Press “” and “H” for 3 seconds. The display will show the actual temperature
- ? Press “ ” or “ ” to adjust the temperature to the correct value.
- ? Press “” to turn off. The calibration setting will now be stored.

## NORMAL OPERATING MODE:

**RT** = When the PRT-R is in the operating mode, RT is displayed and indicates the Room Temperature.



**SET** = Pressing the UP or DOWN key once will display SET and the current set-point temperature. You are able to increase/decrease the set-point temperature using the UP/DOWN keys. This temperature change is only temporary and will be maintained only until the next programmed setting.

## KEYPAD LOCKING FUNCTION



- ? Press “A” and Up for 10 seconds
- ? 00 = disabled 01 = enabled
- ? To lock the keypad, press “A” and Up keys for 10 seconds.
- ? “” will be displayed to indicate the keypad is locked
- ? To unlock the keypad, repeat the steps above.

Heatmiser UK Ltd 01254 776343

## SETTING THE CLOCK



- ? Press “” twice, “” is displayed.
- ? Use the Up/Down key to select the minutes.
- ? Press “H” to accept the minutes setting
- ? Use the Up/Down key to select the hours
- ? Press “H” to accept the hours setting
- ? Use the Up/Down key to select the day of the week.
- ? To store the new settings, press “A”
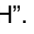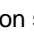
## MANUAL HEATING OVERRIDE (FROST PROTECTION)

- ? To put the PRT-R in to Frost Protection mode, Press “H”. A frost protection symbol “” will be shown.
- ? To cancel the Frost Protection mode, press H. The frost protection symbol “” will be removed.  
The frost protection temperature will be maintained in this mode.

(This function is only required if the Frost Mode - Thermostat Off function has been disabled.)

## SETTING THE HEATING PROGRAM

- ? Press “” once, “” is displayed as well as the number 1 and “Mo Tu We Th Fr”  
This indicates that you are able to program switching time 1 for the week-day.
- ? Use Up/Down keys to set the required start time.
- ? Press “H” to accept this setting.
- ? Use the Up/Down key to set the required temp.
- ? Press “H” to accept this setting.
- ? Repeat for switching times 2-4 week-day.
- ? After you have programmed times 1-4 for the weekday, you are now able to set the switching times for weekend “Sa Su” will be displayed.
- ? Use Up/Down keys to set the required start time.
- ? Press “H” to accept this setting.
- ? Use the Up/Down key to set the required temp.
- ? Repeat for switching times 2-4 for the week-end

www.heatmiser.co.uk