





#### **Specification**

- TIGRIS 3/4" Manifold
- ¾" automatic air vent (supplied in separate bag within box)
- Thermometer temperature strip
- Thermostat with capillary pipe including mounting cover
- 2 pcs 3/4" circuit blanking plugs (supplied in separate bag within box)
- ½" drainplug (supplied in separate bag within box), must be mounted beneath the pump in corresponding ½" socket.

#### **Functional description**

The flow temperature for the underfloor heating circuits is controlled by the mixing of flow water from the primary circuit with return water from the secondary circuit. A non-return valve ensures that the mixed water cannot flow back into the system.

A thermostatic valve controls the mixed flow water into the underfloor heating system with a sensor located on the flow manifold of the underfloor heating circuits. The mixed water is circulated through the manifold to the individual circuits by means of the built-in circulation pump. Electrical thermostats in the individual rooms control the room temperature. These thermostats control actuators that open and close each circuit (supplied separately code 52UH002). Room thermostats can be hardwired or radio linked to the circuit actuators. When the room temperature drops below the set value, the thermostat will activate the thermo actuator and switch on the underfloor heating circuit of the room in question. When the set room temperature is achieved, the room thermostat will close the thermo actuator and switch off the heat to this circuit.




## **Technical data**

Pump: Grundfos, UPS 25-40 130 - 230V

#### **Manifold dimensions**

	D	Н	W
	mm	mm	mm
TIGRIS Manifold 2 port:	225	370	190
TIGRIS Manifold 4 port:	225	370	290
TIGRIS Manifold 6 port:	225	370	390

## Flow diagram

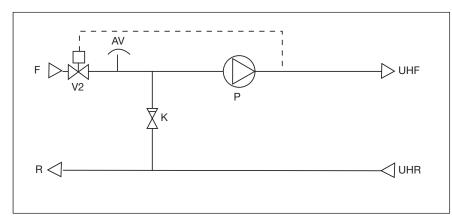

AV: Air vent

F: Heat flow

R: Heat return

P: Pump

UHF: Underfloor heating flow

UHR: Underfloor heating return

K: Non-return valve


V2: Thermostatic valve






#### **Installation of TIGRIS Manifold**

- Fix the TIGRIS Manifold to the back-wall. (The centre distance between the screw holes is 118 mm).
- Install the supplied ¾" automatic air vent on top of the TIGRIS Manifold in the corresponding ¾" socket.
- Install UFH pipe using euroconas connections.
- Install isolating valves on boiler flow and return connections.

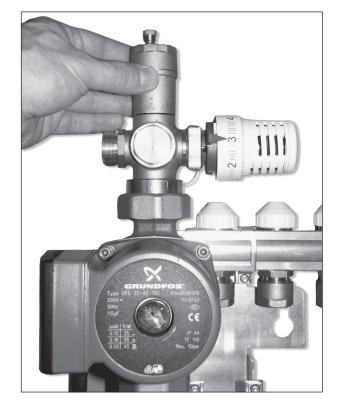

■ Install primary flow pipe to the connection opposite the mixing thermostat and under the airvent, and the primary return pipe to the innermost connection, closest to the wall.
Osma UFH has 3/4" Isolating valves available separately (code 47UH019).

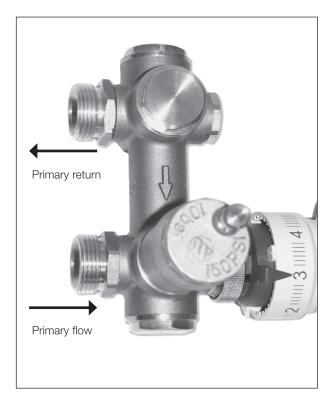

#### **Connection of pump**

Never connect the pump to power until the system is filled with water. If the pump is started with no water in the system, the pump bearing will be damaged within a short time and the guarantee will be void.


Connect the pump to 230V~.

#### **Commissioning/Setting**

Fill the underfloor heating pipes and the TIGRIS Manifold with water. Loosen the dust cap at the top of the air vent approx. 2 turns for providing automatic venting. Set the balancing valves on the return pipe of each circuit according to the length of the pipe circuit using a small straight-bladed screwdriver (see table below).



Close the balancing valve clockwise, turning until you feel resistance, then opening anti-clockwise according to the following chart:

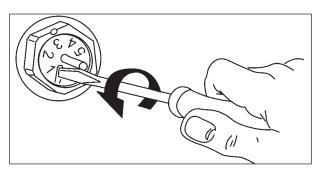

#### 3/4" balancing guide:

Meter	120	115	110	105	100	95	90	85	80	75	70	65	60	55	
120	2														
115	1,9	2													
110	1,8	1,9	2												
105	1,7	1,8	1,9	2											
100	1,6	1,7	1,8	1,8	2										
95	1,5	1,6	1,7	1,7	1,8	2									
90	1,4	1,5	1,6	1,6	1,7	1,8	2								
85	1,3	1,4	1,5	1,5	1,6	1,7	1,8	2							
80	1,2	1,1	1,4	1,4	1,5	1,6	1,7	1,8	2						
75	1,1	1	1,1	1,1	1,4	1,5	1,6	1,7	1,8	2					
70	1	1,1	1	1	1,1	1,4	1,5	1,6	1,7	1,8	2				
65	0,9	1	1,1	1,1	1	1,3	1,4	1,5	1,6	1,7	1,8	2			
60	0,8	0,9	1	1	1,1	1,2	1,3	1,4	1,5	1,6	1,7	1,8	2		
55	0,7	0,8	0,9	0,9	1	1,1	1,2	1,3	1,4	1,5	1,6	1,7	1,8	2	
50	0,6	0,7	0,8	0,8	0,9	1	1,1	1,2	1,3	1,4	1,5	1,6	1,7	1,8	
45	0,5	0,6	0,7	0,7	0,8	0,9	1	1,1	1,2	1,3	1,4	1,5	1,6	1,7	
40	0,5	0,5	0,6	0,6	0,7	0,8	0,9	1	1,1	1,2	1,3	1,4	1,5	1,6	
35	0,5	0,5	0,5	0,5	0,6	0,7	0,8	0,9	1	1,1	1,2	1,3	1,4	1,5	
30	0,5	0,5	0,5	0,5	0,5	0,6	0,7	0,8	0,9	1	1,1	1,2	1,3	1,4	
25	0,5	0,5	0,5	0,5	0,5	0,5	0,6	0,7	0,8	0,9	1	1	1,2	1,3	


Start with the longest circuit (top row) that should be fully open (Approx. 2 turns anti-clockwise from closed position) and then read the settings of the remaining circuits downwards in the column in question.

## **Example: TIGRIS Manifold 4 port:**

Longest circuit	circuit length:	100 m	2,0 turns
2 <sup>nd</sup> longest circuit	circuit length:	85 m	1,6 turns
3 <sup>rd</sup> longest circuit	circuit length:	75 m	1,4 turns
4 <sup>th</sup> longest circuit	circuit length:	35 m	0,6 turns



There is a temperature strip positioned on the flow manifold to indicate what the mixed temperature has been set to. The mixing thermostat of the TIGRIS Manifold must be positioned to achieve the desired flow temperature. A guide to the settings is:

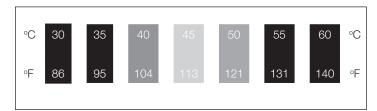


 $1 = 20^{\circ}\text{C}$   $2 = 28^{\circ}\text{C}$   $3 = 37^{\circ}\text{C}$   $4 = 45^{\circ}\text{C}$   $5 = 53^{\circ}\text{C}$   $6 = 62^{\circ}\text{C}$   $7 = 70^{\circ}\text{C}$ 

The TIGRIS Manifold capillary-pipe thermostat can be locked as illustrated on the photo. The white catches can be pulled back and moved to the desired position.

The maximum flow temperature into an underfloor heating system is 60°C. For a screeded floor a flow temperature between 45°C and 55°C is recommended.



When switching the system on start the circulation pump at the maximum velocity for approx. 5 minutes, pump setting 3, then set the pump at the desired pump output, typically setting 1 or 2.

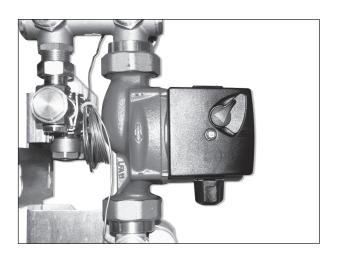

#### Installation of thermal actuators

Thermal actuators can be installed on the return ports of each circuit once balancing has been completed, these are supplied seperately (code 52UH002). A room thermostat controls one or more actuators depending on the number of circuits within a room. The connection of room thermostats to actuators is done via a wiring centre which is supplied seperately (4 zone wiring centre - code UH1-M or 8 zone network wiring centre - code UH-1).

#### **Maintenance**

Check twice a year that all valves (thermostatic valves and those on the return manifolds) of the TIGRIS Manifold are able to fully open and close. Check during the summer period and force the system to operate by setting the room thermostats at maximum and minimum, respectively (with a minimum interval of 15 minutes) or manually open and close the valves a couple of times. If the pump has stopped, check that it can operate correctly by switching on the power.

### **Wiring**

For wiring details refer to instructions with Osma wiring centres: UH1-M with 230V thermostats up to 4 Zones.

UH1 with 12V thermostats up to 8 zones - network capabillities.



# **TIGRIS 3/4" 1-6 port Manifold**

## **Superior below the surface**

works: They are designed for environmentally safe manufacturing processes, installation, use and maintenance.

Very often, our pipe systems are invisible in everyday life – but Wavin is not. To understand and respond effectively to our customers' needs and requirements – not only in terms of products and systems – is



OSMA Underfloor Heating Apple Lane · Trade City Sidmouth Road · Exeter

Devon · EX2 5GL

Tel: 01392 444122 Fax: 01392 444135

E-mail: info@osmaufh.co.uk

www.osmaufh.co.uk